





Thank you for purchasing the Heated grips - for electronic throttle.
 Before installing, please read the instructions carefully and keep them for future reference.

### Attention!

- The Heated grips are made to work with DC 12 V only.
- For installation, follow the steps described in the instructions. Any damage caused by wrong installation shall be imputed to the user.
- Do not break or modify the wires. To avoid a short circuit, don't pull on any wires when installing.
- The interior examination or maintenance should be executed by our professionals only.

 
⚠ Some procedures must be followed to avoid damages caused by wrong installation.

 
⚠ WARNING! Some procedures must be followed to avoid damages to yourself or the public.

 
A CAUTION! Some procedures must be followed to avoid damages to the vehicle.

🚰 READ CAREFULLY | If any information dealt with in the instructions remains unclear, seek professional assistance.

#### 1 Accessories









NOTE Contact your local distributor, if the items received in the box are not the same as the items listed above.


# 2-1 Practical installation instructions

# Heated grips installation procedure

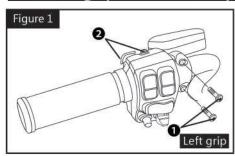


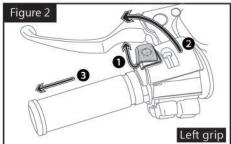

Pull 
 • the function button, loosen
 • the switch assembly, and remove 
 • the original grip.

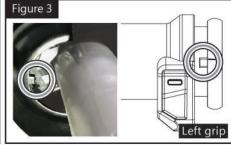


Make sure the grip fits the lock during installation.

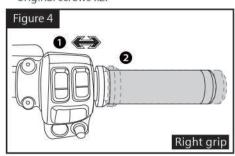


4. Adjust the location of **1** the power assembly to control the tightness of the **2** grip.


#### 2-2 Practical installation instructions

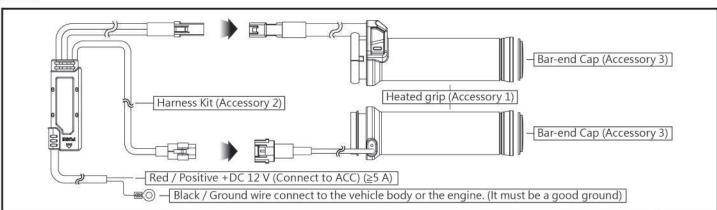

# 3 Heating Function Instruction

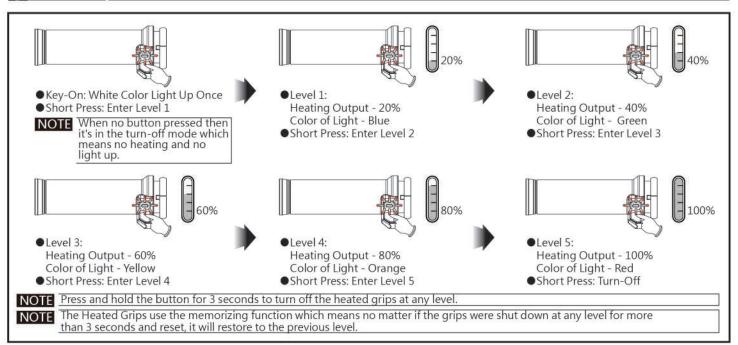


# 4 Heated Grip Testing Data

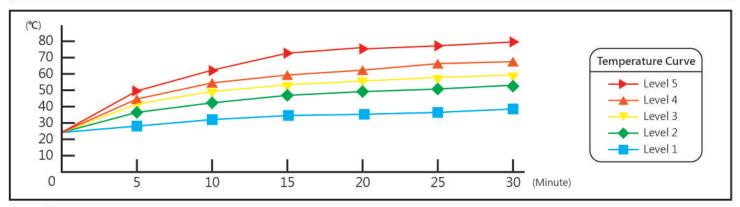

NOTE The testing environment is under 25 Degrees Celsius, with working voltage of 13.5V.

#### 5 Low Battery Warning Instruction

 

#### 6 Caution



 Do not push the rubber section too hard as it might cause the device to break.



 Do not bend the in-line control unit on the harness kit, it might cause the unit to break.

## 7 Troubleshooting

The following situation does not indicate malfunction of the heated grips. Check the following before taking it in for repair.

Trouble-1	Check item
No LED indicator lighting up.	<ul> <li>Could be the improper connection between the connectors.</li> <li>→ Check each connector about the connection.</li> <li>Could be the fuse that is burnt.</li> <li>→ Replace the 4A fuse by Terminal Car Fuse.</li> </ul>

\*If the problem couldn't be solved after above checking, contact the local dealer or KOSO directly.