



Thank you for purchasing **KOSO DL tachometer**, before operating the unit, please read the instruction thoroughly and retain it for the future reference.

⚠ Notice

1. The lcd meter is apply for **DC 12V**.
2. For installation, please follow the steps described in manual. Any damage caused by wrong installation shall be imputed to the users.
3. To avoid the short circuit, please don't pull the wire when installing. Don't break or modify the wire terminal.
4. Do not disassemble or change any parts excluding the manual description.
5. The interior examination or maintenance should be executed by our professionals.

MARK MEANING:

NOTE You could get the installation details from the information behind the mark.

⚠ Some processes must be followed to avoid the affection caused by wrong installation.

⚠ **WARNING!** Some processes must be followed to avoid damages to yourself or the public.

⚠ **CAUTION!** Some processes must be followed to avoid the damage to the vehicle.



PRESS THE
BUTTON ONE TIME



PRESS THE
BUTTON 3
SECONDS

1-1 Accessory

1 LCD meter X 1 	2 RPM wire set (Type A) X 1 	3 RPM wire set (Type B) X 1 	4 Temp sensor wire set X 2
5 PT 1/8water temp sensor X 2 	6 Connect terminal X 3 	7 Meter bracket X 1 	8 Handle bar clamp X 1
9 Rubber X 1 	10 M6 X 18L screw X 1 	11 M5 X P0.8 nut X 2 	12 M6 X P1.0 nut X 1
13 M5 washer X 2 	14 M6 washer X 1 	15 Aluminum bush X 1 	16 Manual


NOTE Please contact the local distributor if the items you open are not the same, with the above-listed one.

1-2 Option accessory


1 Oil temp sensor adapter M12 X P1.5 X 15L M14 X P1.25 X 15L M14 X P1.5 X 15L M16 X P1.5 X 15L M18 X P1.5 X 15L M20 X P1.0 X 15L M20 X P1.5 X 15L	2 Water temp sensor adapter M14 M16.M18 M22.M26m/m	3 Cylinder head temp sensor M10. M14m/m	4 Temp sensor M10 X P1.0 M12 X P1.5 M14 X P1.25 M14 X P1.5 M16 X P1.5 / M18 X P1.5
5 U-type meter bracket 	6 Mirror hole meter bracket 	7 Universal adhesive bracket 	

NOTE Some of the option accessories may not sell. For the details, please contact the local distributor.


2-1 Wiring installation instructions

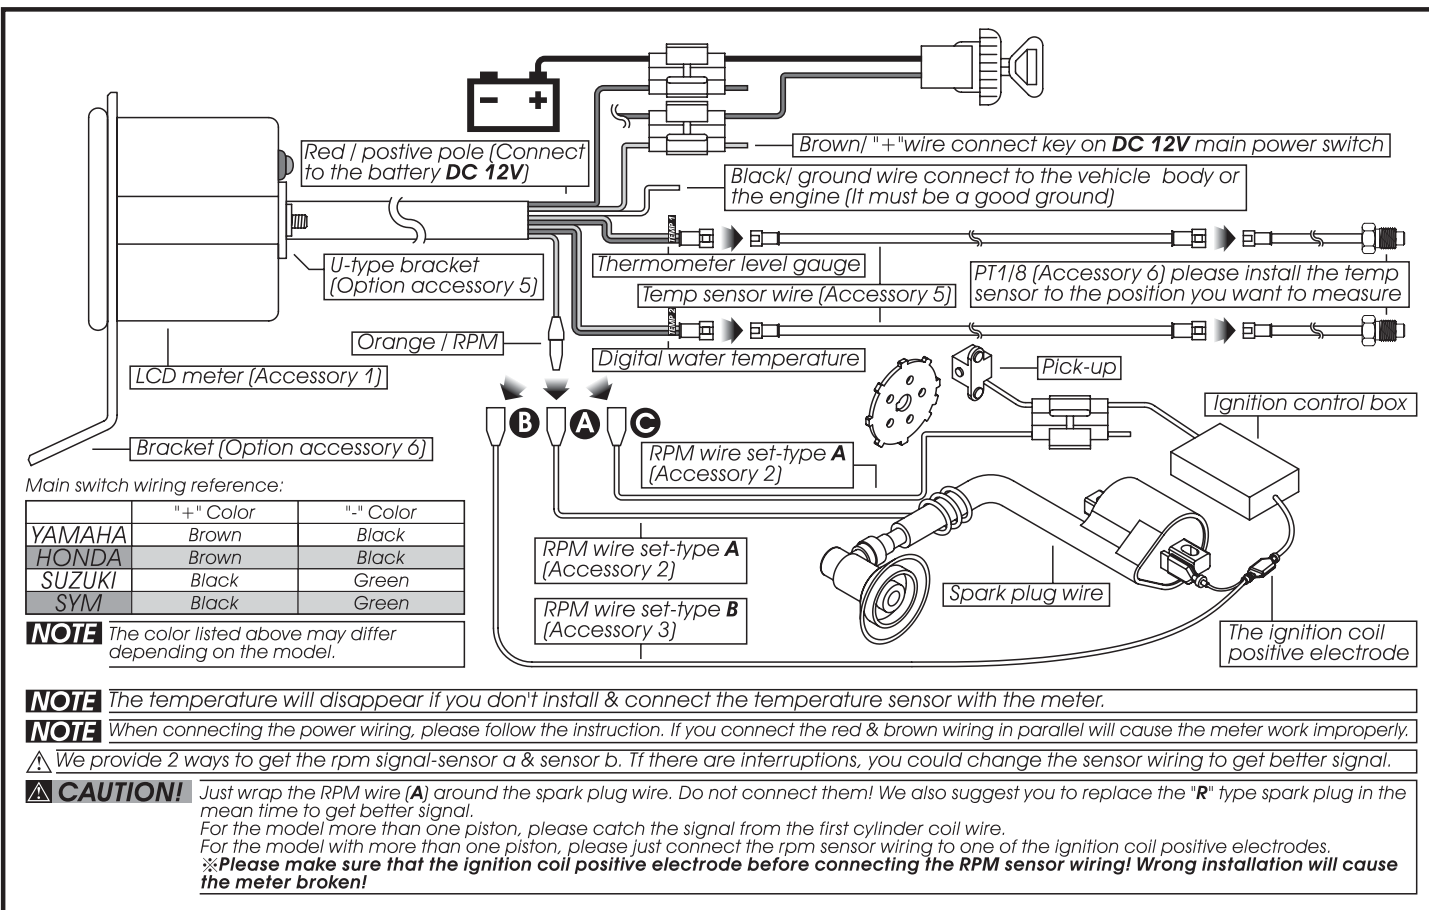

2-2 Installation instructions

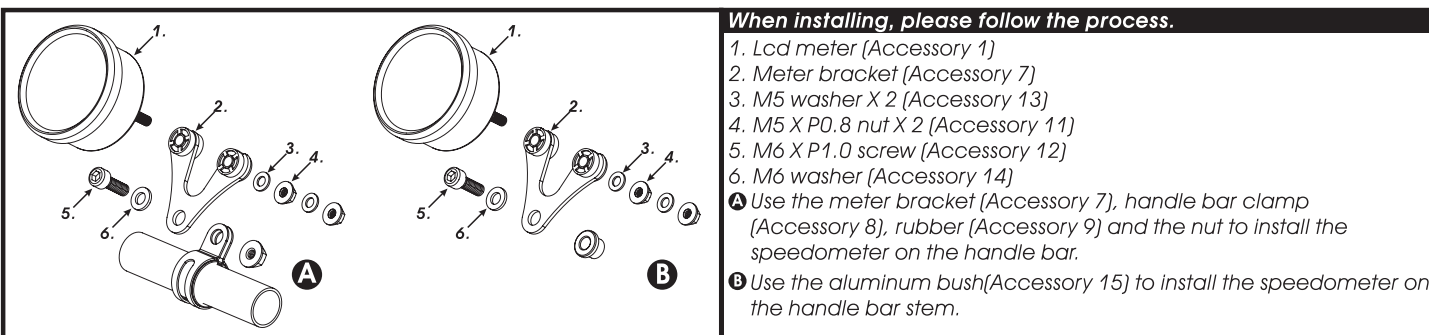

3-1 Basic function instruction

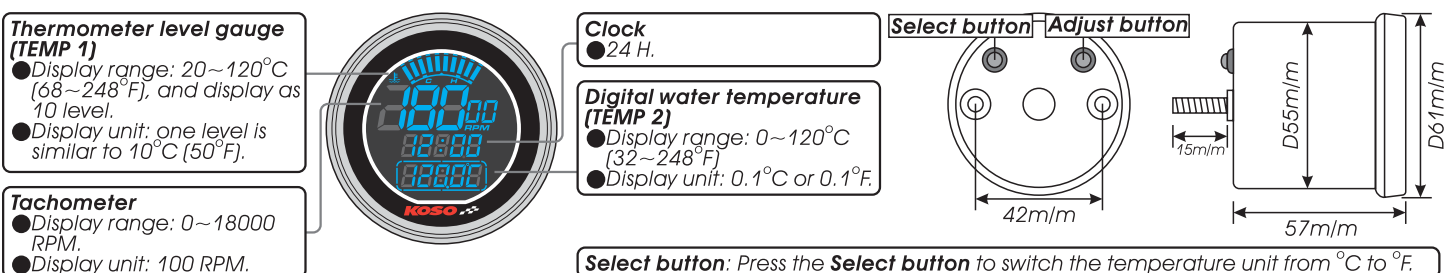

3-2 Function, setting instruction

● Tachometer	Display range: 0~18000 RPM Display unit: 100 RPM	20~120°C (68~248°F), display in 10 level Display unit: 1 level=10°C (50°F)
○ Display internal	<0.5 second	○ Display internal <0.5 second
○ Stroke / piston setting	2 Stroke: 1, 2, 3, 4 pistons 4 Stroke: 1, 2, 3, 4, 5, 6, 8, 10, 12 pistons	● Clock 24 H
● Temperature unit	°C, °F	● Effective voltage DC12V
● Digital water temperature	Display range: 0~120°C (32~248°F) Display unit: 0.1°C [0.1°F]	● Effective temperature range -10~+60°C
● Temperature level gauge	Display range: 0~120°C (32~248°F)	● Meter standard JIS D 0203
		● Meter size D55 X 57 m/m
		● Meter weight Around 190 g

NOTE Design and specification are subject to change without notice!

NOTE If you enter the setting screen for 30 seconds and don't press the button, it will back to the main screen automatically.

4-1 Cycle / Piston / Input signal setting



In main screen, press the **Select & Adjust X 3 seconds** to enter the stroke/ piston/ Input signal setting screen.

CAUTION!

- Make sure the correct cycle and pistons before setting.
- Make sure the setting is correct, or the RPM output will be incorrect.
- We define the engine with the ignition system ignites every 360 degree as 2-cycle and the engine with the ignition system ignites every 720 degree as 4-cycle.
- Most of the 4-cycle bikes with one single piston are igniting EVERY 360 degree once, so the setting should be the same as the bike with 2-cycle and one piston engine.




Press the **Adjust button** to select the stroke.
EX. 1. Now the setting is 2C (2 Stroke) 1P (1 piston) Lo act (the RPM input signal is negative)

⚠ Now the stroke number is flashing!

NOTE You could set the stroke as 2 stroke or 4 stroke.



Press the **Select button** to enter the piston setting screen.
EX. Now the setting is changed from 2 stroke to 4 stroke.

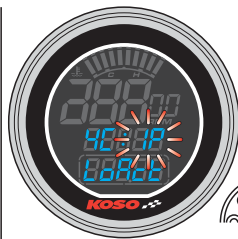

Press the **Adjust button** to select the piston number.

⚠ Now the piston number is flashing.

NOTE 2 Cycle: 1, 2, 3, 4 pistons
4 Cycle: 1, 2, 3, 4, 5, 6, 8, 10, 12 pistons



Press the **Select button** to enter the RPM signal input setting.
EX. The piston setting is changed from 1 P (piston) to 4 P (pistons).



Press the **Adjust button** to choose the input signal you want to set.

⚠ Now the input signal setting is flashing!

NOTE The impulse setting range is between Hi (the positive impulse) & Lo (the negative impulse)

NOTE If the tachometer can't detect the signal (No RPM is displayed on the screen), you could choose another setting, and check it again.



Press **Select button** 3 times, to back the main screen.
EX. The impulse setting is changed from Lo to Hi.



4-2 The clock setting



In main screen, press the **Select & Adjust X 3 seconds** to enter the stroke/ piston/ Input signal setting screen.



Press the **Select button** 3 times to enter the clock setting screen.



Press the **Adjust button** to choose the setting number.

EX. Now the time is 0:00.

⚠ Now the hour number is flashing!

NOTE This is a 24 H clock.



Press the **Select button** to enter the minute setting.
EX. Now the hour is changed from 0 to 13.



Press the **Adjust button** to choose the setting number.

⚠ Now the minute number is flashing!



Press **Select button**, to back the main screen.
EX. the minute is changed from 0 to 1.



5 Trouble shooting

The following situation do not indicate malfunction of the meter. Please check the following before taking it in for repair.

Trouble	Check item	Trouble	Check item
The meter doesn't work when the power is on.	●The power doesn't supply to the meter. →Please make sure the wiring is connected. The wiring and fuse are not broken. →The battery is broken or the battery is too old to supply enough power (DC 12V) to make the meter work.		●Please check the spark plug is "R" type or not. If not, please replace the spark plug with the "R" type spark plug. ●Please check your setting. →Please refer to the manual 4-1.
The meter shows wrong information.	●Please check the voltage of your battery, and make sure the voltage is over DC 12V.	Temp does not appear or appear incorrectly. The clock is incorrect.	●Please check the sensor. →Does the wiring break or falling off ?
Tachometer does not appear or appear incorrectly.	●Please check the RPM sensor wiring is connected correctly.		●Do you connect the wiring correctly. →Please check the positive wire(red) connects to the battery, and main switch positive wiring(brown) connects to the main switch. ●Please check your setting. →Please refer to the manual 4-2.

※If still can't solve the problems according to the steps above, please contact with distributors or us.