



Quantum® Hardcoated Polycarbonate
VStream® Windscreen for:
Kawasaki® KLR650

N20139 Dark Tint, Sport
N20140 Light Tint, Sport-Tour
N20141 Clear, Touring



Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windshield for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.


Description:	VStream® Replacement Windscreen	Model:	2022-Later Kawasaki® KLR650
Part Number:	N20139/N20140/N20141	Installation Time:	10 min. Difficulty Level: Easy

PACKAGE CONTENTS

ITEM	PART NO.	DESCRIPTION	QTY.
A		VStream Windscreen, 3.0mm Polycarbonate, Quantum Hardcoated	1
BAG#1427			
B	49-495699-000	Aluminum Compression Limiter	4
C	51-516217-000	Flanged Buttonhead Screw, M5x16	4



B

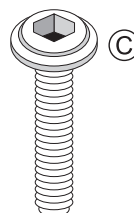

C

TOOLS REQUIRED

4mm Hex Wrench or Allen Key



ATTENTION: Special notes and cautionary measures which can prevent damage to the accessory or vehicle.



NOTE: Tips for facilitation of operation, control and adjustment, as well as maintenance work.



Figure 1

PREPARATION

Place motorcycle securely on its sidestand.

OEM WINDSHIELD REMOVAL

Figure 1

With a 4mm Hex Key, loosen and remove all four screws and nylon washers holding the OEM windscreen to the mounting bracket.

Screws and washers will not be reused for installation of your new VStream® Windscreen. New mounting hardware is provided.

WINDSCREEN INSTALLATION

Figure 2; Top

Your new VStream Windscreen (A) includes four Aluminum Compression Limiters (B) that will go between the OEM mounting bracket's rubber bushings and the Windscreen itself (positioned as shown).

Figure 2; Bottom

The Aluminum Compression Limiters can be held in the Windscreen's mount holes while the new Mounting Screws (C) are threaded through it and then into the mounting bracket.

Figure 3

The best assembly procedure is to start with the top left and top right mounting holes.

Make sure the Mounting Screws (C) are threaded into the mounting brackets, but leave them loose enough to be able to get your fingers inside the Windscreen to place the Aluminum Compression Limiters (B) into the bottom left and bottom right mount holes.



Figure 2



Figure 3



Figure 4

WINDSCREEN INSTALLATION

Figure 4

With a 4mm Hex Key, tighten all four OEM screws securely. *Do not overtighten.*

Ride safe and enjoy your new VStream Windscreen!

CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle **Shield Wash™** (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's **RainZip®** (N1410-01) to keep your windscreen clear in rainy weather.



Register Your Windshield Online at www.nationalcycle.com

National Cycle 3-Year Limited Warranty

National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windshield. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields.

Visit www.nationalcycle.com for further details, or call or e-mail National Cycle.

⚠ WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycles instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.